INSTALLATION INSTRUCTIONS:

HET-2R WIRING DIAGRAM: 22 AMP AT 120/208/240V · 18 AMP AT 277V

Caution:

1. Disconnect power supply before making wiring connections.
2. All wiring must comply with local codes.
3. Use approved connectors and make sure they are tight.

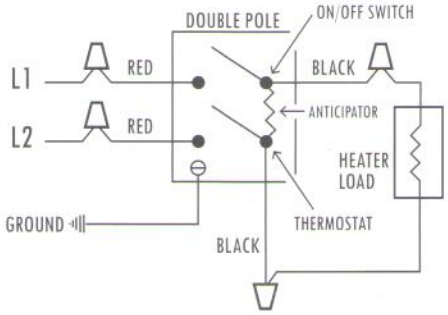

NOTE: ALUMINUM WIRE MAY REQUIRE SPECIAL CONNECTORS.

Location:

1. Use a standard electrical box with a minimum of 21 cu. in.
2. Locate box 4 to 5 ft above floor on an inside wall where the thermostat will be exposed to the average temperature of the area to be controlled.
3. Avoid locations in drafts, sunlight, near windows, doors or plumbing walls.

Wiring:

1. Using wire nuts connect thermostat per sketch:
   - RED to supply (L1,L2).
   - BLACK to heater load.
2. Remove cover and mount base to outlet box using the screws provided. Fold wires into outlet box.
3. Install cover on thermostat.

king

MODEL #: HET-2R

0 93319 19072 2

Features:

- Controls electric baseboards and fan heaters.
- Maintains room temperature to within ±2°F of setting.
- Better grade thermostat.
- May not meet some energy code regulations for high energy efficiency.
- Contemporary design.
- Fits standard outlet box.
- Factory sealed and calibrated.
- Anticipator increases temperature sensitivity.

Notes:

- Older thermostats will lose accuracy as they age. Replacing with a new anticipated model will reduce temperate swings.
- Thermostats should be mounted on inside walls for best performance.
- Keep lamps and other heat sources away from the thermostat location.